

DISC MAKERS®

ReflexMax1™ DVD±R Quick Start Guide v1.1



BASIC OPERATION

THIS QUICK START GUIDE HAS BASIC INSTRUCTIONS FOR DUPLICATING DISC-TO-DISC, WHICH IS COPYING DVD-Rs OR DVD+Rs FROM A MASTER DVD PLACED IN THE REFLEXMAX1'S TOP DRIVE. FOR MORE DETAILED INSTRUCTIONS ON THE REFLEXMAX1'S DUPLICATING OPERATION, PLEASE REFER TO THE USER'S GUIDE ON THE ATTACHED CD.

- 1 Power on the ReflexMax1 by pressing the round button located at the bottom right on the front of the unit. The system will initialize and perform a self-test, which will be shown on the LCD display.
- 2 When the self-test is complete, **1 Copy** will appear on the LCD display. Press the **DOWN** arrow until **8 Select Source** appears on the LCD display.
- 3 Press the **ENT** button and the following image should appear on the display:

SRC: DVD-ROM
01 IDE2 Master

If the above image appears on the screen, hit **ESC** and proceed to step 5.

- 4 If the above image does not appear on the screen, press the **DOWN** arrow until it displays **SRC: DVD-ROM 01 IDE2 Master**. Press the **ENT** button and the LCD will display **DVD-ROM Selected**. Press **ENT** again.
- 5 Press the **UP** arrow until you return to **1 Copy**.

To start the duplication process, load the top drive with your DVD master. Load the bottom writer drive with a high-quality blank DVD±R or DVD±RW.

- 6 Press the **ENT** button to begin duplicating. The ReflexMax1 duplicator will automatically analyze the master disc (this may take a few moments), and begin duplicating at the maximum recording speed.

- 7 The LCD will display the writing process as it happens. The screen will display **OK:** when the duplication is complete.

Note: When the duplication process is completed, the writer drive will automatically eject the DVD-R that has been duplicated successfully. If the duplication process failed, the DVD-R will remain in the drive until the eject button on the drive is pressed. For more information on why a DVD-R may not copy, please refer to the **User's Guide** on the attached CD.

ACTIVATING USB CONNECTIVITY

IN ORDER TO USE YOUR REFLEXMAX1 DUPLICATOR AS AN EXTERNAL RECORDER, YOU NEED TO SET IT TO OPERATE IN USB MODE.

- 1 Make sure the Reflex and your computer are both turned off.
- 2 **Locate the small switch next to the USB slot on the back of the ReflexMax1.** Before you connect the USB cable, move the switch to the right (toward the USB port).

- 3 Connect the USB cable to the port on the back of the ReflexMax1. Then connect the other end of the cable to a USB 2.0 slot on your computer.

- 4 Power on your computer and the Reflex by pressing the round button in the lower right-hand corner. The Reflex will perform a self-test. When the self-test is complete, the image below will appear on the LCD screen:

1. Copy

- 5 The Windows system message **Found New Device** may appear during the first time you set up the ReflexMax1 to your computer.
- 6 The Reflex will appear as a **USB Mass Storage Device**, or **USB 2.0 Device**. Follow your computer's on-screen instructions to set up a USB device.
- 7 In **Windows Explorer** and **My Computer**, the bottom writer drive on the ReflexMax1 will appear as a **Compact Disc Drive** icon with a new drive letter, such as **E:**. The drive is now ready to read and write using the provided software or other authoring software. (Please refer to the software's help section instructions.)

Note: To use the ReflexMax1 as a standalone duplicator without the USB to PC connection, the switch located next to the USB port must be pushed back to the left (away from the USB port). If the switch is in the USB connection position, the Reflex's controller will not recognize the writer drive. If this happens, turn off the Reflex unit and move the switch to the left. Then turn the Reflex unit back on for normal operations. It's important to only move the USB switch when the Reflex is turned off.